

Soil Mechanics

Third class

Dr. Ahmed Al-Obaidi

silt and clay

STRESSES WITHIN SOIL MASS

Gypseous soil

Sand and gravel



Tikrit University



**College of Engineering
Civil engineering Department**

Soil Mechanics

3rd Class

Lecture notes

Up Copyrights 2016




Stresses within Soil Mas

Total Stress

When a load is applied to soil, it is carried by the solid grains and the water in the pores. The total vertical stress acting at a point below the ground surface is due to the weight of everything that lies above, including soil, water, and surface loading. Total stress thus increases with depth and with unit weight.

Vertical total stress at depth z , $\sigma_v = g.Z$

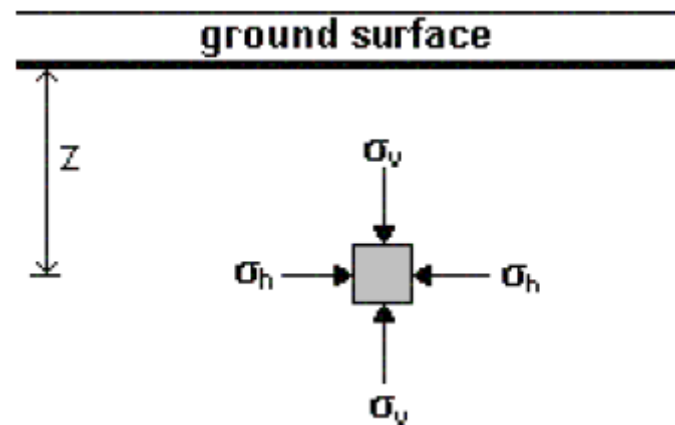




Stresses within Soil Mas

Below a water body, the total stress is the sum of the weight of the soil up to the surface and the weight of water above this.

$$s_v = g.Z + g_w.Z_w$$

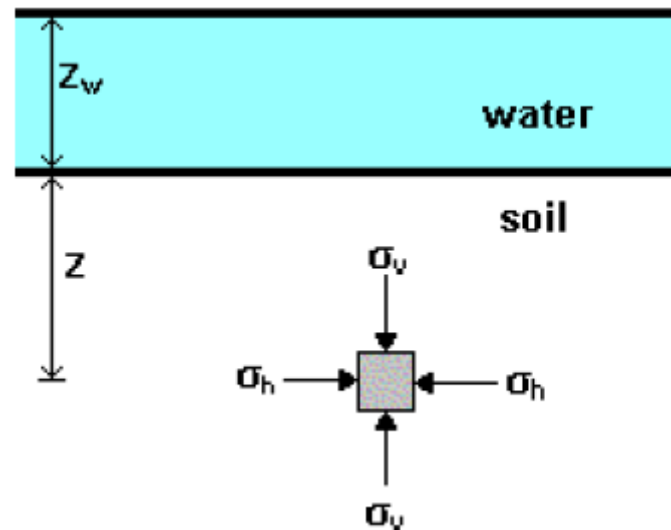


The total stress may also be denoted by ***sz or just s. It varies with changes in water level and with excavation***



Stresses within Soil Mas

Pore Water Pressure The pressure of water in the pores of the soil is called pore water pressure (u). The magnitude of pore water pressure depends on:

- the depth below the water table.
- the conditions of seepage flow.

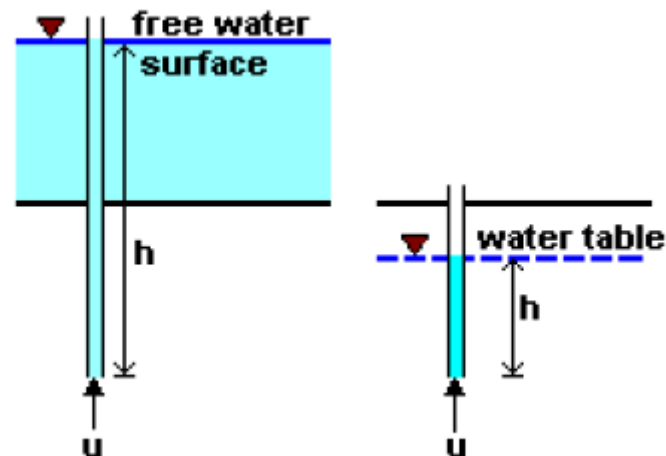



Stresses within Soil Mas

Under hydrostatic conditions, no water flow takes place, and the pore pressure at a given point is given by

$$u = gw.h$$

where h = depth below water table or overlying water surface

It is convenient to think of pore water pressure as the pressure exerted by a column of water in an imaginary standpipe inserted at the given point.

The natural level of ground water is called the water table or the phreatic surface. Under conditions of no seepage flow, the water table is horizontal. The magnitude of the pore water pressure at the water table is zero. Below the water table, pore water pressures are positive.




Stresses within Soil Mas

Principle of Effective Stress

The **principle of effective stress** was enunciated by **Karl Terzaghi** in the year **1936**. This principle is valid only for saturated soils, and consists of two parts:

- 1. At any point in a soil mass, the effective stress (represented by s') is related to total stress (s) and pore water pressure (u) as $s' = s - u$. Both the total stress and pore water pressure can be measured at any point.**
- 2. All measurable effects of a change of stress, such as compression and a change of shearing resistance, are exclusively due to changes in effective stress.**
 - Compression
 - Shear Strength

Stresses within Soil Mas

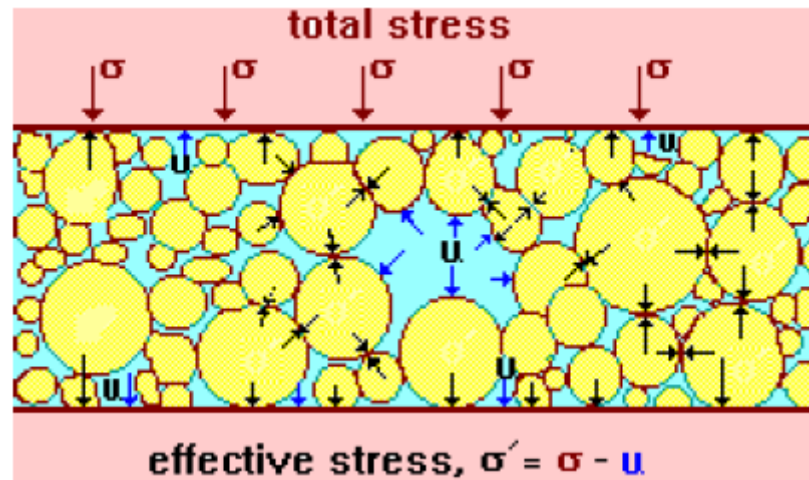

In a saturated soil system, as the voids are completely filled with water, the pore water pressure acts equally in all directions. The effective stress is not the exact contact stress between particles but the distribution of load carried by the soil particles over the area considered. It cannot be measured and can only be computed.




Stresses within Soil Mas

If the total stress is increased due to additional load applied to the soil, the pore water pressure initially increases to counteract the additional stress. This increase in pressure within the pores might cause water to drain out of the soil mass, and the load is transferred to the solid grains. This will lead to the increase of effective stress.



Stresses within Soil Mas

Effective Stress in Unsaturated Zone Above the water table, when the soil is saturated, pore pressure will be negative (less than atmospheric). The height above the water table to which the soil is saturated is called the capillary rise, and this depends on the grain size and the size of pores. In coarse soils, the capillary rise is very small.

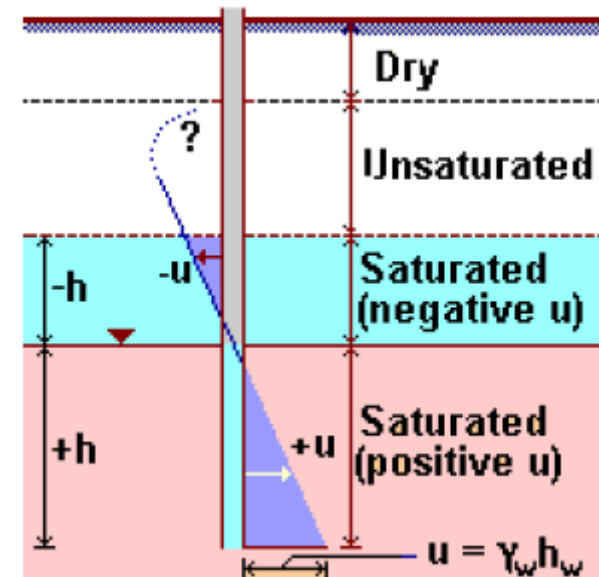



Stresses within Soil Mas

Between the top of the saturated zone and the ground surface, the soil is partially saturated, with a consequent reduction in unit weight . The pore pressure in a partially saturated soil consists of two components:

Pore water pressure = u_w

Pore air pressure = u_a

Water is incompressible, whereas air is compressible. The combined effect is a complex relationship involving partial pressures and the degree of saturation of the soil.



Stresses within Soil Mas

The Importance of Effective Stress At any point within the soil mass, the magnitudes of both total stress and pore water pressure are dependent on the ground water position. With a shift in the water table due to seasonal fluctuations, there is a resulting change in the distribution in pore water pressure with depth. *Changes in water level below ground result in changes in effective stresses below the water table. A rise increases the pore water pressure at all elevations thus causing a decrease in effective stress. In contrast, a fall in the water table produces an increase in the effective stress.*



Stresses within Soil Mas

Changes in water level *above ground do not cause changes in effective stresses in the ground below. A rise above ground surface increases both the total stress and the pore water pressure by the same amount, and consequently effective stress is not altered.*

In some analyses it is better to work with the changes of quantity, rather than in absolute quantities.

The effective stress expression then becomes:

$$D_s' = D_s - D_u$$



Stresses within Soil Mas

If both total stress and pore water pressure change by the same amount, the effective stress remains constant. Total and effective stresses must be distinguishable in all calculations. Ground movements and instabilities can be caused by changes in total stress, such as caused by loading by foundations and unloading due to excavations. They can also be caused by changes in pore water pressures, such as failure of slopes after rainfall.

Examples